

4250™ Airless Product Manual



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com
4250™ Manual / 3947.0816

4250™ Airless Sprayer

Table of Contents

Precautionary Warning.....	Page 1	Airless Pump Parts.....	Page 7
Assembly.....	Page 2	Airless Pump Detail.....	Page 7
Operation	Page 3	Troubleshooting Guide.....	Page 8
Spray Tip Cleaning.....	Page 4	Warranty.....	Page 10
Cleaning Procedure.....	Page 4	Thank you! For your purchase of the Newstripe 4250™ Sprayer.	
Cleaning Procedure.....	Page 5 (Extended Periods)	Please read over the instructions and make sure you understand operating procedures before using the unit.	
Cleaning Procedure.....	Page 5 (Winter Storage)	Please check the serial number on your unit. This Manual is for units with serial number 1015159 and above only. For units with serial numbers below 1015159, please contact Newstripe for the correct manual.	
Maintenance.....	Page 5		
Parts List.....	Page 6		
Engine Lubricant & Parts.....	Page 6		






PRECAUTIONARY WARNING!

- Please read and understand all operation instructions as detailed in this manual. Failure to follow specified instructions may result in equipment damage or serious injury to personnel up to and including death!
- **Skin Injection Hazard:** High Pressure spray can inject toxins into blood stream. If injection occurs, seek emergency medical treatment.
- **ALWAYS** release pressure in the system before changing or cleaning the spray tip.
- **ALWAYS** use the nozzle tip guard.
- **ALWAYS** engage the **Trigger Lock on the spray gun** before removing the spray gun for hand operation.
- **NEVER** place you hands or any body parts in front of the spray gun.
- **NEVER** point the spray gun at or spray other persons or animals.
- **NEVER** clean the spray tip while it is attached to the spray gun. Remove the spray tip from the gun to clean the tip guard.
- **NEVER** remove spray tip while cleaning the pump.
- **NEVER** use pliers to tighten or loosen high pressure fittings on Outlet side of pump.
- Use only in well-ventilated area.
- Always consult your Facility Safety and/or Personnel Department for specified safety protocols prior to operating this equipment.

ASSEMBLY


1. Remove the unit from the crate. Check for any damage that may have occurred during shipment. Advise factory immediately if you see any damage.
2. Set the handles behind the unit with the gun off to the right side. Attach the bottom of the handles to the back of the chassis with 5/16-18x1 1/2" hex head bolts, washers and lock nuts. Hand tighten only at this time.
3. Rotate the handle assembly upward and then rotate each handle brace (connected at the back axle) upward so that the holes in the braces line up with the upper holes in the handle assembly. Attach the top of the braces to the handles with 5/16-18x1 1/2" carriage bolts, and nuts. Tighten all bolts at this time.

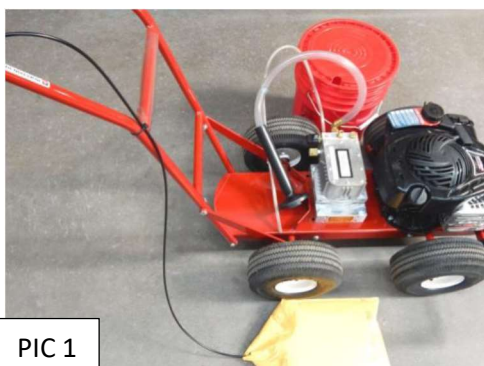



4. Set the pail on chassis. Place the suction and return hoses into the pail and then clip them together with the metal clip inside pail. Insert the hoses into the notches of the lid and then snap lid onto the pail.
5. Unpack the spray gun and mounting bracket from the bag attached to the cable on the handle assembly.
6. Loosen the two 5/16" bolts on the front of the chassis and then slide the spray gun support tube outward to the right until the end of it is flush with the left side of the receiver. Snug the two 5/16" bolts to secure it in place.
7. Slide the spray gun mounting bracket (with gun) onto the upright of the support arm and hand tighten the star knob.
8. Check placement of the spray gun in the gun bracket. Spray gun should be located so that there is room between the trigger and lifting bar that lifts trigger (1/8"-3/16"). This will allow the gun to shut off completely when the trigger is released.

9. There should also be enough room to push the trigger lock sideways. If the trigger lock will not push, release the gun clamp and slide gun backward until you can push the trigger lock. Re-clamp gun.

NOTE to release trigger lock: Push the trigger lock in on the right side (outside) of the gun.

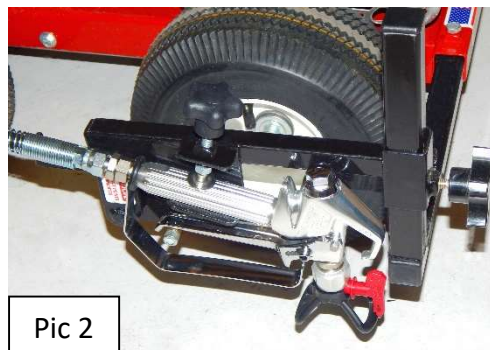

10. Attach one end of the spray hose to the pump outlet with a 3/4" wrench and the other end to the spray gun. You will need two wrenches (3/4" and 11/16" or two adjustable wrenches) to secure the hose on the spray gun. Make sure both connections are tight.
11. ***This unit shipped WITHOUT oil and gas.*** Fill engine with 16 ounces of SAE 10W30 motor oil that has a service grade of SF or higher. Check the oil level in the engine before starting.
12. Fill the fuel tank with unleaded fuel. (87 or higher octane)
13. Make sure that the static chain is contacting the ground (Attached to the bottom side of the frame).
14. If unit was shipped with suction hose removed at the pump. (Garden hose type fitting). Depress Inlet Valve Stem to ensure it moves freely. Attach suction hose. Hose fitting should only be hand tightened. You may also need to perform this operation any time the pump does not want to prime.

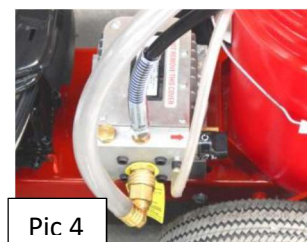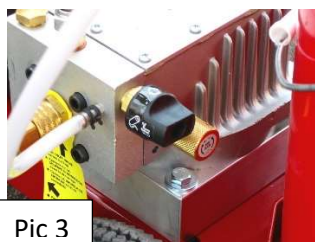

OPERATION

We recommend spraying with water first to become familiar with pump operation.

1. Turn spray control (black knob) to the Prime/ re-circulating position (arrows in a circle) in line with arrow on side of pump housing.
2. Turn pressure control (gold knob) out (counter-clockwise) several turns until it spins freely.
3. Start Engine and throttle up to increase engine speed and let pump run for 60 seconds.
4. Turn pressure control knob in (clockwise) until it stops. Liquid should flow back through return hose. **DO NOT OVER TIGHTEN**
5. Turn Spray Control knob to spray position. (Spray gun symbol in line with arrow on side of pump housing)
6. Activate trigger and paint (or water) will spray from the gun.
7. Adjust pressure by turning pressure control knob counter clockwise until spray pattern decreases, then increase pressure by turning clockwise just to where you get a good even spray pattern.
8. Adjust spray gun height for proper line width.
9. When finished spraying or if machine will be left unattended for any amount of time, turn Spray Control Knob to Re-circulating Position, turn off engine and pull spray trigger to release pressure from the system



OPERATIONAL NOTE!

- NOTE: If pump does not prime, then back out the pressure control knob several turns (counter clockwise) until loose. Leave spray control knob in prime/re-circulating position and let pump run for ONE MINUTE. Then turn the pressure control knob back in until it stops. Push outlet button 3 times. Pump should now prime.
- NOTE: If the pump primes and air bubbles continue to appear in the return hose after one minute, the suction hose fitting may not be tight enough or the rubber washer may be worn. Turn off machine, turn spray valve to prime position and depress spray trigger to open gun and release pressure.

Remove garden hose fitting at the inlet side of the pump, depress inlet valve stem to make sure it is free, inspect washer to make sure it is seated and in good condition. Re-attach garden hose fitting making sure that it is hand tight. Start engine and repeat first steps for operation.

SPRAY TIP CLEANING DURING USE

1. Place the Spray Control Knob in the re-circulating position to release pressure.
2. Turn spray tip arrow on spray gun so that the arrow points toward the gun.
Turn spray control knob to spray position and trigger gun. This should clear the gun. Turn spray control knob to prime position and trigger gun to release pressure.
3. Reverse the tip so the spray tip arrow on the spray gun points towards the ground.
4. Turn the spray control knob to spray and resume spraying. If the spray gun is still clogged, proceed to cleaning procedures below.

CLEANING PROCEDURE

1. Remove pail with paint.
2. Place an empty pail on machine and fill it with 2 gallons of water for water based paints or the appropriate solvent for oil based paints.
3. Place return hose in waste container.
4. Make sure Spray Control Knob is in the re-circulating position.
5. Start engine and let engine run in prime position until fluid in re-circulating hose runs clear.
6. Turn Spray Control Knob to Spray Position.
7. Trigger gun until gun spray runs clear.
8. Turn spray control knob to prime position, turn off engine and trigger spray gun to release pressure.
9. Wipe down suction tube and re-circulating hose.
10. Clean spray tip if needed with a nylon bristle brush. **DO NOT** USE METAL BRUSHES



PRECAUTIONARY WARNING!

- **ALWAYS** release pressure in the system before changing or cleaning the spray tip. (Place the Spray Control Knob in the re-circulating position, turn off sprayer and squeeze spray trigger to release pressure)
- **NEVER** use fuels to clean the equipment
- **DO NOT** use solvents containing halogenated hydrocarbons such as methyl bromine, carbon tetrachloride and ethyl iodine
- **DO NOT** attempt to clean a clogged gun filter. You must replace it.
- **DO NOT** use brushes with metal bristles or any metal object to clean the spray tip of dried paint. Replace the tip if it cannot be cleaned.

CLEANING PROCEDURE FOR EXTENDED PERIODS OF NON-USE

<p>Clean as instructed in cleaning procedure. Pick up suction filter and hold with bottom facing up. Pour 2 ounces of pump protector into suction filter so there is approximately 2 inches of fluid showing in inlet hose.</p>	<p>Leave engine off and pull recoil start until you see fluid in return hose. Unit may now be stored with fluid remaining inside hose and pump</p>
---	---

CLEANING PROCEDURE FOR WINTER (FREEZING) STORAGE

<ol style="list-style-type: none"> Clean as instructed in cleaning procedure and then place ½ bottle of pump protector in pail. Place spray knob in prime position and run pump until pump protector is seen flowing from return hose. Turn spray knob to spray position and trigger gun until pump protector sprays from gun. Turn spray control knob to prime position, turn off pump and trigger spray gun to release pressure. 	<ol style="list-style-type: none"> Remove as much fuel from the engine gas tank as you can. Run engine until it runs out of gas. Turn Spray knob to prime position. Disconnect paint hose from pump and gun then, drain hose. Unit may now be stored in freezing temperatures. Drain and change engine oil in the spring.
--	---

MAINTENANCE


ITEM	CHECK	MAINTENANCE ACTION
Engine Oil	Before each use	Change oil after first 20 hours of operation and then, every 100 hours
Spark Plug & Air Filter	Every 4 Months	Clean or change as needed
Wheels	Lubricate weekly	Grease with high quality axle lubricant
Spray Gun Clamp and Cable	Check Weekly	Spray with silicone spray
Spray Gun Filter	Check Monthly	Replace if filter becomes clogged
Spray Pump	Before and after each use	Use pump protector if the unit will not be used for more than one day
Suction Filter	Before each use	Replace as needed or when clogged
Suction Tube	Before each use	Replace if needed or has cuts
Bypass (re-circ) hose	Before each use	Replace if needed or has cuts
Spray Hoses	Before each use	Replace if needed or has cuts
Spray Tip	Before each use	Replace if spray pattern is uneven
Outlet Push Button	Before each use	Replace every 1000-1500 gallons or if leaking
Outlet Valve	If pump does not prime	Replace every 500-1000 gallons
Inlet Valve	If pump does not prime	Every 500-1000 gallons
Prime/Spray Valve	If pump will not toggle between Prime/Spray	Every 1000-1500 gallons or if it stops working




PARTS LIST

Item Number	Description	Part Number
#1	Paint hose, 25' with fittings	10000458
#2	Spray gun, airless	10005114
#3	Spray gun star knob	10004932
#4	Round Base Nut	10004844
#5	Spray gun support arm	10003950
#6	Spray gun mounting bracket	10004931
#7	Spray gun mounting bracket	10004580
	bellcrank	
#8	Spray gun Filter (Package of 2)	10000641
#9	Spray tip, 517 reversible tip (2"-4" wide lines)	10000508
#10	Cable Adjuster	10000018

Item Number	Description	Part Number
#11	Hand Grips, (2 required)	10004281
#12	Dual Handle	10003949
#13	Left & Right Handle Braces	10004570
#14	Chassis	10003948
#15	Belt Guard	10003957
#16	Belt, AX25	10003940
#17	Star Knob	10000007
#18	Trigger, operating spray	10002951
#19	Operating Cable	10000820
#20	Pulley, engine	10003941
#21	Pulley, pump drive	10000708
#22	Wheels, 10" pneumatic	10000012

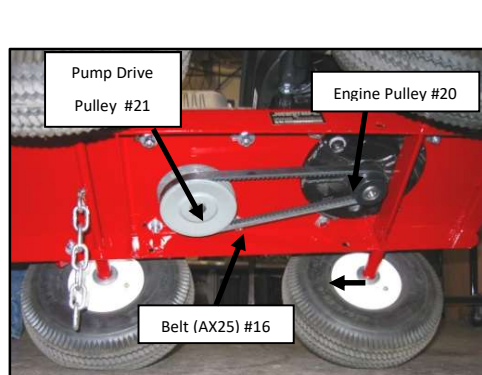

Pic 5

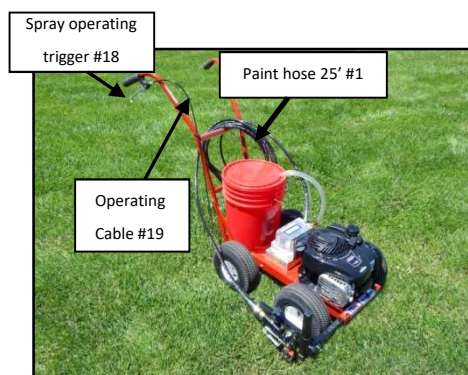

Pic 6



Pic 7

Spray Tip #9

ENGINE LUBRICANT AND PARTS

ITEM	SPECIFICATIONS
Engine	Briggs & Stratton 550EX Series 10004608
Oil Capacity	16 ounces SAE 10W30
Spark Plug	Champion RC12YC
Air Filter	Briggs & Stratton 593260





AIRLESS PUMP PARTS

Item Number	Description	Part Number
#23**	Inlet Valve	10000694
#24**	Outlet Valve ** Both #22 and 23 available in kit #10000694 only	10000694
#25	Diaphragm Kit	10004135
#26	Spray pump, airless	10003945
#27	Prime/spray control Valve	10004000
#28	Pressure Control knob	N/A
#29	Outlet Push button	10000806

Item Number	Description	Part Number
#30	Suction hose filter	10001760
#31	Suction hose sleeve	10003932
#32	Suction Hose	10003959
#33	By-Pass hose (re-circulating)	10003960
#34	Suction hose washer (pkg of 5)	10000711
#35	Snap on lid for Airless	10003964
#36	5 Gallon Pail	10002838
#37	5-gallon pail Strainer (pkg of 5)	10003569

AIRLESS PUMP DETAIL

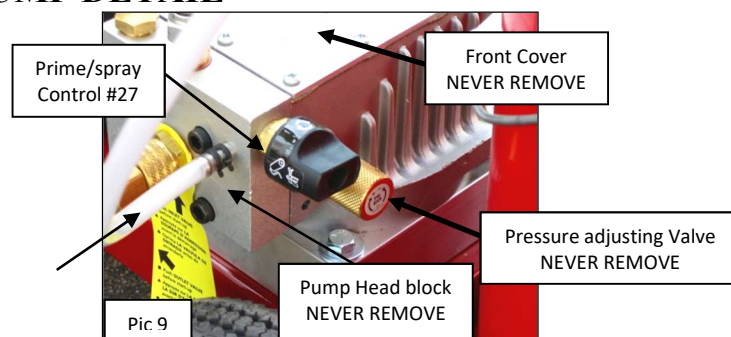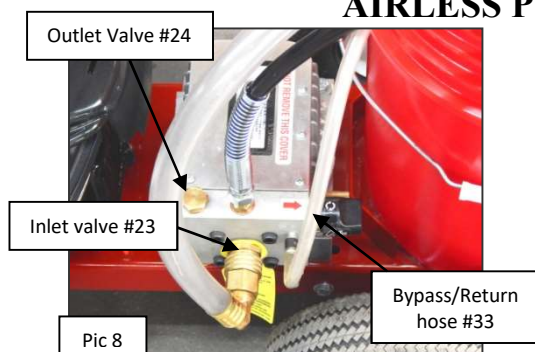

NEVER REMOVE FRONT COVER, PRESSURE ADJUSTING VALVE OR THE PUMP HEAD BLOCK.

THIS WILL VOID THE WARRANTY.

CALL THE FACTORY FOR SERVICE LOCATIONS IF THESE ITEMS REQUIRE SERVICE.

ITEM	CHECK	*REPLACE
Spray tips 517 2"-6" Pavement 619 2"-6" Turf	Before each use	Every 75-500 gallons Or when line quality becomes poor
Suction filter 10001760	Before each use	If filter becomes clogged.
Gun filter 10000641	Every 25 gallons or if gun does not spray	REPLACE ONLY DO NOT CLEAN every 50-250 gallons
Outlet push button 10000806	Before each use	Every 1000-1500 gallons or if leaking
*Inlet valve	If pump does not prime check washer at same time	Every 500-1000 gallons. Washer- Every 50-250 gallons
*Outlet valve	If pump does not prime <i>*Inlet/Outlet valve kit 10000694</i>	Every 500-1000 gallons
Prime/Spray Valve 10004000	Only if it stops working	Every 1000-1500 gallons or if it stops working
Suction tube	Before each use	Check for nicks and cuts
Bypass tube	Before each use	Check for nicks and cuts

TROUBLESHOOTING GUIDE

PROBLEM	REMEDY
Engine will not start	Check that the fuel shutoff and ignition switch are in the on position, choke lever is in Choke position and throttle lever is in run position. Fuel tank has adequate new fuel. Call factory for assistance.
Engine starts, but runs rough	Check that the choke is turned off.
Choke off but still runs rough	Check for proper fuel. Check spark plug for fouling. Clean or replace. Check air filter. Call factory if operation is still unsatisfactory.
Pump will not prime (No fluid returning to pail)	Check that spray control knob is in Prime position (Circular arrows aligned with arrow on housing). Push brass outlet valve button 3 times.
Outlet Valve Button pushed, but will still not prime	Turn off pump, turn pressure control knob out (counter-clockwise) several turns until loosens. Turn on pump and run for 60 seconds. Turn pressure control knob all the way in. Pump should now prime. Call factory for assistance.
Fluid is returning to pail in bypass hose, but air bubbles are still present in hose after 60 seconds	Check inlet hose fitting for tightness and worn or missing rubber washer. Check suction hose for nicks or cuts. Call factory for assistance.
Pump primes, but gun does not spray	Check spray control knob is in spray position. Check pressure control knob is turned to high pressure (clockwise), until it stops. Do Not Force . Check suction filter is below liquid level. Press brass outlet valve button three times. Make sure spray tip is not obstructed.
Knobs are set correctly, still does not spray	Check that trigger lock on spray gun is turned to operating position (wings parallel to gun body). Check spray tip arrow is pointing towards ground. Check that handle trigger is operating spray gun.
All of above correct, gun will still not spray	Turn spray control knob to prime position, turn off engine, pull trigger to release pressure. Check spray gun filter, replace if plugged. Call factory for assistance.
Over spray or too much paint	Lower spray pressure. Turn spray pressure control knob counter-clockwise several turns, then increase pressure until desired spray pattern is even.
Too little paint	Increase spray pressure. Paint may need to be thinned in cooler temperatures and if paint viscosity is very thick.
Uneven spray pattern or stringing	Increase spray pressure. Spray tip may be chipped or clogged. Reverse tip to clear obstruction and clean if necessary.
Pressure increased, tip is clean, spray still not correct	Worn tip. Replace tip. Call factory for assistance.

Please call us! If you have any questions during setup, painting or cleaning.

Your machine is designed to be simple and safe to operate: 1-800-624-6706



THE NEWSTRIPE WARRANTY – 18 MONTH

NEWSTRIPE, INC., WARRANTS TO THE ORIGINAL PURCHASER, FOR 18 (EIGHTEEN) MONTHS AFTER DATE OF PURCHASE, THAT THE EQUIPMENT* HEREBY SOLD SHALL BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP. THIS WARRANTY DOES NOT EXTEND TO ANY DAMAGE OR MALFUNCTION RESULTING FROM MISUSE, NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, OR NORMAL WEAR AND TEAR.

Damage incurred in shipment from Newstripe, Inc. to the customer is the total responsibility of the carrier. The CUSTOMER MUST NOTE DAMAGES on the Bill of Lading of Trucking Company or Railroad; and Newstripe, Inc. will furnish to the customer the cost of parts and labor. The customer can then bill the common carrier for the damages by placing his signature on the documents.

The Newstripe, Inc. obligation under this warranty and any implied warranties is limited to replacement or repair of defective parts of its manufacture without charge for 18 (EIGHTEEN) months from date of purchase. For service under this warranty, buyer shall ship the defective part or parts of the equipment, transportation prepaid, to Newstripe, Inc. together with a written description of any claimed defect and proof of purchase date of the materials being returned. **Prior to retuning any part or machine, the CUSTOMER must obtain a Return Materials Authorization number. Call 1-800-624-6706. To review the complete guidelines for warranty and returns, please visit www.newstripe.com/terms-of-use-privacy-policy.**

***Components not manufactured by Newstripe, Inc. such as engines, compressors, pumps, and transaxles are furnished with their respective manufacturer's warranties only. Where Newstripe elects to extend manufacturers' warranties, the warranty shall cover up to 100% of the cost to repair or replace materials and parts for the first 12 months of ownership, excluding labor. Extension of any manufacturers' warranty for these components is at the sole discretion of Newstripe, Inc. and does not include wearable parts and consumable components from normal wear and tear.**

The responsibilities described above are the only responsibilities of Newstripe, Inc. under this written warranty or any implied warranty, and may be exercised only within 18 (EIGHTEEN) months from the date of purchase. In no event shall Newstripe, Inc. be liable for incidental or consequential damages and no person had any authority to bind it to any representation or warranty, not be responsible for work done, materials furnished or repairs made by others without its' specific written authorization.

THIS WARRANTY SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND THERE IS NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND WITH RESPECT TO THE GOODS SOLD HEREBY EXCEPT AS SET FORTH HEREIN. IT IS EXPRESSLY AGREED THAT THIS WARRANTY SHALL BE LIMITED TO THE ADJUSTMENT, REPAIR OR REPLACEMENT OF PARTS AND THE LABOR AND SERVICES REQUIRED THEREBY. IN NO EVENT, INCLUDING ANY CLAIM FOR NEGLIGENCE, SHALL NEWSTRIPE, INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Sincerely,

Newstripe, Inc

