

- **Maintenance Guide**

Periodic Maintenance

This melter / applicator requires periodic maintenance before each use and at set intervals in order to ensure it is performing safely and optimally. The table below describes checks and maintenance which are recommended.

| Description | Before Each Use | Every 25 Hours | Every 75 Hours |
|---|-----------------|----------------|----------------|
| Check Propane Tank fuel level, refill as needed | X | | |
| Inspect regulator and hose for physical damage or leaks | X | | |
| Inspect front caster wheel, apply grease and tighten fasteners as required | X | | |
| Inspect thermometer for physical damage or malfunctions | X | | |
| Heat up the valve with a heating torch to remove any residual material build up | | X | |
| Remove and thoroughly clean control valve | | | X |