

## **Operating Instructions**

**Refer to Engine Manual for Engine Operation.**

**Follow directions in the engine manual for operating oil type and quantity.**

**Leaves, thatch or other debris can be directed into windrows or piles, by simply maneuvering the unit and directing the flow of air accordingly.**

**Air flow can be directed to the side or front by the two-position deflector. The**

## **Maintenance Instructions**

- 1. Keep all nuts, bolts and screws tight.**
- 2. Never store the Blower with fuel in its fuel tank inside a building or in a confined space where fumes may reach an open flame or sparks.**
- 3. Always refer to the instruction manual for important details if the product is to be stored for an extended period.**
- 4. Engine - 4 cycle. (Refer to engine manufacturer's operating instructions for**

**front discharge position is used to remove debris from along walls, fences, etc., the side discharge position is used to form windrows or piles. The horizontal deflector directs air downward to "chisel" under wet, heavy leaves and litter. The velocity is regulated by the throttle control. Slight changes in deflector will have a big effect on air flow. Experiment until you find the best position for your needs. For best performance, be sure engine recoil starter assembly, the blower intake and outlet areas are clear and free of leaves or other debris.**

**fuel recommendations and additional information.)**

- 5. Tires - Tubeless. Inflate to air pressure of 30 P.S.I.**
- 6. Labels should be inspected before each use. Replace damaged labels immediately.**
- 7. To prevent accidental starting, remove spark plug wire when servicing engine or equipment.**
- 8. Check oil level regularly.**



**Warning: The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.**



**Asphalt Kingdom**

**1-866-399-5562**

**[www.asphaltkingdom.com](http://www.asphaltkingdom.com)**